



END-OF-LINE QUALITY CHECKS

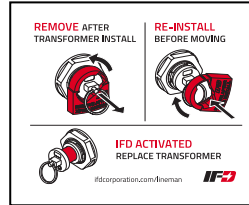


REMOVE SHIPPING LOCK & VERIFY SENSOR INSTALLATION

- 1 Rotate Shipping Lock counter-clockwise.

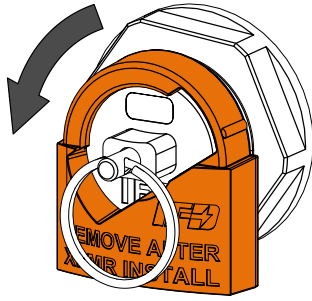


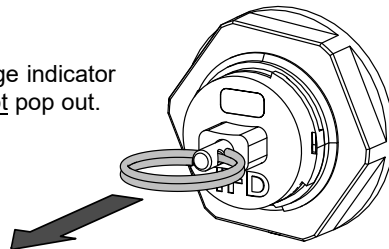
-  Verify IFD Decal installation.

- 2 Remove and retain Shipping Lock.

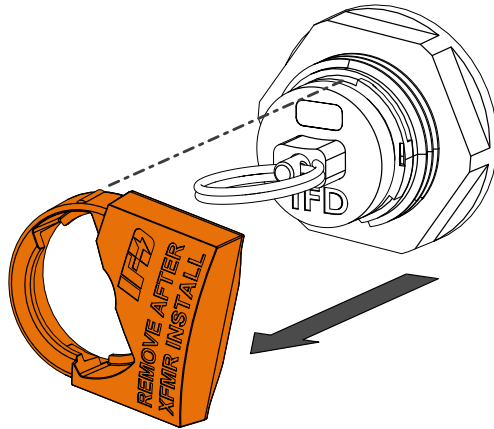


- 3 Tug Pull Ring to verify sensor installation.

 The orange indicator should not pop out.





RE-INSTALL SHIPPING LOCK

- 1 Align Shipping Lock nub vertically.

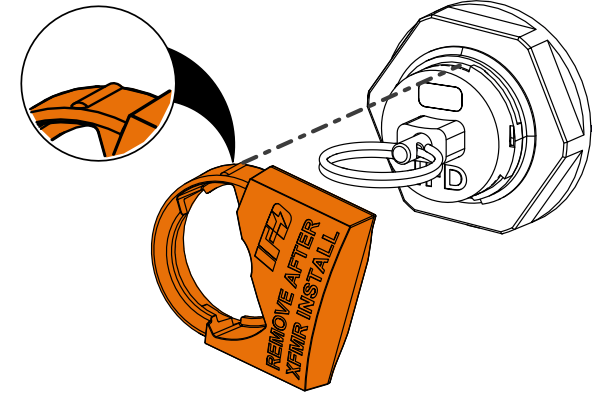

- 2 Push Shipping Lock and rotate clockwise to engage.

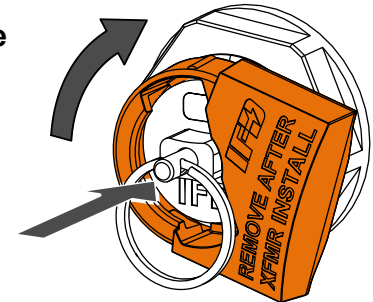

-  Ensure that the Shipping Lock is installed with **both tabs engaged**.

