



Installing the PRV

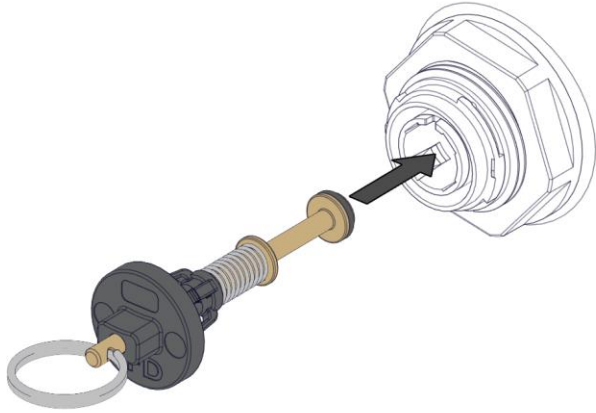

- 1 **Align** and insert PRV into the IFD indicator.



- 2 **Push and rotate** until PRV clicks into place.

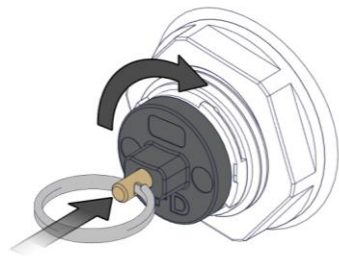

- 3 **Tug** on pull ring to verify installation.